 




50



XM
501-00/1

1

PARTS LIST

**50**

Ref.	Description	Funct.	Ref.	Description	Funct.
1	Warning lamps central display unit	52	160	TDC sensor	51
2	R.H. display (computer, clock, ext.air temp.)	52	161	Fuel pressure sensor	-
3	L.H. display (electronic display or silhouette)	52	162	Reference cylinder sensor	51
4	Auto-gb gear selector display	59	163	L.H. volumetric sensor	67
5	Front cigar lighter	55	164	R.H. volumetric sensor	67
6	Rear cigar lighter	55	165	Injector needle lift sensor	51
10	Ignition distributor	51	166	Delivery valve position sensor	51
15	Alternator	53	170	Flasher unit	54
20	L.H. horn	54	173	Compact disc loader	65
21	R.H. horn	54	176	Coded antitheft device keyboard	51
35	Battery	TT*	178	Radio-telephone set	65
40	Instrument clusters	52	180	Additional air control	51
41	ABS hydraulic control block	57	181	Radio control	65
45	Ignition coil	51	182	Heater control	64
48	Max.fuse box (alone or No.1)	64	183	Air blower control	64
49	Max.fuse box No.2	64	184	Air conditioning control	64
50	Supply box	TT*	185	Cold start control	51
51	Branch box	TT*	186	Cooled air blower control	64
52	Junction box	TT*	210	Light switch (headlamp position)	54
53	Water temperature control unit	52-64	211	L.H. selector switch (lighting, flasher, horn)	54
54	Bulb failure detection unit	52-64	212	R.H. selector switch (windscreen wiper, computer)	56
55	Door locking control unit	67	213	Parking selector unit	52
56	Distance sensor interface	51-58	214	Cruise control switch	59
57	Electric window control unit	67	215	Rear view mirror switch	56
58	Door lock receiver control unit	67	216	Automatic gearbox switch (on the gearbox)	59
59	Pre-heater control unit	51	217	Automatic gearbox switch (on the lever)	59
60	Cruise control control unit	59	218	Foldable rear view mirrors switch	56
61	Catalytic converter control unit	51	254	Horn compressor	54
62	Earth control unit	TT*	255	Refrigeration compressor	64
63	Additional fuse box	-	260	Tachometer	51-52
64	Fuel transfer pump control unit	-	270	HT coil suppressor	51
65	Water level control unit	-	280	Diagnostic connector	TT*
67	Burglar alarm control unit	67	294	Driver's safety belt switch	52
68	Electric rear view mirror control unit	56	295	L.H. front door deadlocking switch	67
70	Pyrotechnic seat belts control unit	55	296	R.H. front door deadlocking switch	67
71	L.H. front heated seat regul. contr. unit	63	297	L.H. rear door deadlocking switch	67
72	R.H. front heated seat regul. contr. unit	63	298	R.H. rear door deadlocking switch	67
73	L.H. rear heated seat regul. contr. unit	63	299	Horn switch	52
74	R.H. rear heated seat regul. contr. unit	63	300	Anti-theft switch	TT*
100	Sparking plugs	51	301	Glove box lighting switch	55
101	Heater plugs	51	302	Boot lighting switch	55
130	Lights-on audible warning	54	303	Bonnet L.H. closing switch (w.l.)	67
131	Overspeed audible warning	59	304	Bonnet R.H. closing switch (w.l.)	67
132	Radio-telephone audible warning	65	305	Driver's door closing switch (w.l.)	67
133	Hydraulic pressure and/or level audible warning	52	306	Passenger's door closing switch (w.l.)	67
140	ABS E.C.U.	57	307	L.H. rear door closing switch (w.l.)	67
141	Air conditioning E.C.U.	64	308	R.H. rear door closing switch (w.l.)	67
142	Fuel injection E.C.U.	51	309	Tailgate closing switch (w.l.)	67
143	Suspension E.C.U.	58	310	L.H. front door pillar switch	55
144	Recycling control E.C.U.	51	311	R.H. front door pillar switch	55
145	Airbag E.C.U.	55	312	L.H. rear door pillar switch	55
150	Front knock sensor	51	313	R.H. rear door pillar switch	55
151	Rear knock sensor	51	314	Reversing lamp switch	54
152	Engine speed sensor	51	315	Handbrake switch	52
153	Body movement sensor	58	316	Coolant level switch	52
154	Distance sensor	51-58	317	Hydraulic level switch	52
155	L.H. front wheel sensor	57	318	Throttle butterfly spindle switch	51
156	R.H. front wheel sensor	57			
157	L.H. rear wheel sensor	57			
158	R.H. rear wheel sensor	57			
159	Steering wheel sensor	58			



PARTS LIST

Ref.	Description	Funct.	Ref.	Description	Funct.
4	XM 501-00/1				
319	Stop lamp switch	54	479	Pyrotechnic seat belt reel, passenger's side	55
320	Rotary switch	65	480	L.H. rear lamp	54
321	Tailgate locking switch	67	481	R.H. rear lamp	54
322	Atmospheric pressure switch	51	482	L.H. front foglamp	54
323	Sun-roof closed position switch	67	483	R.H. front foglamp	54
324	Sun-roof end of travel switch	67	484	L.H. rear foglamp	54
325	Sun-roof end of travel tilt position switch	67	485	R.H. rear foglamp	54
326	Choke switch	52	486	L.H. dipped beams	54
327	Differential locking switch	-	487	R.H. dipped beams	54
328	Clutch switch	-	488	L.H. front direction indicator	54
329	Recycling switch	51	489	R.H. front direction indicator	54
330	Post-heater switch	51	490	L.H. rear direction indicator	54
			491	R.H. rear direction indicator	54
340	Flowmeter	51	492	L.H. side lamp	54
350	Starter motor	53	493	R.H. side lamp	54
361	Door anti-jolt diode	58	494	L.H. rear stop and tail lamp	54
362	Tailgate anti-jolt diode	58	495	R.H. rear stop and tail lamp	54
363	Supply anti-jolt diode	58	496	L.H. tail lamp on tailgate	54
375	Ignition distributor	51	497	R.H. tail lamp on tailgate	54
380	L.H. front door sill lighting	55	498	L.H. reversing lamp	54
381	R.H. front door sill lighting	55	499	R.H. reversing lamp	54
382	L.H. rear door sill lighting	55	500	L.H. direction indicator repeater	54
383	R.H. rear door sill lighting	55	501	R.H. direction indicator repeater	54
384	Glove box lighting	55	502	L.H. headlamp	54
385	Front ashtray lighting	55	503	R.H. headlamp	54
386	Rear ashtray lighting	55	504	L.H. stop lamp	54
387	Ashtray lid control lighting	55	505	R.H. stop lamp	54
388	Radio flap control lighting	55	506	L.H. tail lamp	54
389	Boot lighting	55	507	R.H. tail lamp	54
390	Sun visor mirror lighting, passenger's side	55	508	Additional stop lamp	54
391	Registration plate L.H. lamp	54	509	L.H. rear lamp (on tailgate)	54
392	Registration plate R.H. lamp	54	510	R.H. rear lamp (on tailgate)	54
393	Under bonnet lighting	55	540	Fuse (F...)	-
394	Heater control lighting	64			
396	Anti-theft lighting	55	541	Windscreen L.H. heated washer jet	56
397	L.H. boot lamp	55	542	Windscreen R.H. heated washer jet	56
398	R.H. boot lamp	55	548	Refrigeration unit	64
399	Tailgate boot lamp	55			
400	Sun visor mirror lighting, driver's side	55	550	L.H. front loudspeaker	65
			551	R.H. front loudspeaker	65
427	Rear suspension electrovalve	58	552	L.H. front tweeter loudspeaker	65
428	OCR air electrovalve	51	553	R.H. front tweeter loudspeaker	65
429	Fuel pump cut out solenoid	51	554	L.H. rear loudspeaker	65
430	Canister discharge electrovalve	51	555	R.H. rear loudspeaker	65
431	Fast idling electrovalve	51			
432	Idling actuator	51	563	Fault finding indicator (vehicle silhouette)	-
433	Suspension electrovalve (single or front)	58	570	Injectors	51
434	Canister electrovalve	51	580	Driver's seat pull/push switch	63
435	Float chamber venting solenoid	51	581	Passenger's seat pull/push switch	63
436	Idle cut off electrovalve	51	582	Air conditioning switch	64
437	Recycling proportional electrovalve	51	583	Rear function locking switch	55-67
438	Cruise control electrovalve	59	584	Driver's backrest switch	63
439	ACAV* C electrovalve	51	585	Passenger's backrest switch	63
440	ACAV* L electrovalve	51	586	Rear screen wipe/wash switch	56
441	Ignition distr. vacuum electrovalve	51	587	Front foglamps switch	54
442	Recycling electrovalve	51	588	Rear foglamps switch	54
443	Advance correction electrovalve	51	589	Hazard warning device switch	54
444	Turbo driving electrovalve	51	590	Electric window switch, driver's side	67
445	Injection delivery control electrovalve	51	591	Electric window switch, passenger's side (on driver's door)	67
470	Radio-telephone sender unit	65			
474	L.H. front door lock assembly	67	592	Electric window switch, passenger's side (on passenger's door)	67
475	R.H. front door lock assembly	67			
476	L.H. rear door lock assembly	67	593	L.H. electric rear window switch on door	67
477	R.H. rear door lock assembly	67	594	L.H. electric rear window switch on console	67
478	Pyrotechnic seat belt reel, driver's side	55	595	R.H. electric rear window switch on door	67

**50**

Ref.	Description	Funct.	Ref.	Description	Funct.
596	R.H. electric rear window switch on console	67	730	L.H. front door deadlocking motor	67
597	Heated rear screen switch	56	731	R.H. front door deadlocking motor	67
598	Roof light switch	55	732	L.H. rear door deadlocking motor	67
599	Recycling switch	64	733	R.H. rear door deadlocking motor	67
600	Driver's seat height adjustment switch	63			
601	Driver's heated seat switch	63	740	L.H. rear roof light	55
602	Passenger's heated seat switch	63	741	R.H. rear roof light	55
603	L.H. rear heated seat switch	63	742	Front centre interior lamp	55-65
604	R.H. rear heated seat switch	63	743	Rear centre interior lamp	55
605	Centre armrest switch	63	750	L.H. front brake pads	52
606	Suspension switch	58	751	R.H. front brake pads	52
607	Sun roof switch	67	755	Fuel pump	51
608	Headlights adjustment device switch	54	756	Headlamp washer pump	56
609	Map reading lamp switch	55	757	Windscreen washer pump	56
610	Differential locking switch	59	758	Rear screen washer pump	56
611	Cruise control switch	59	759	Recycling vacuum pump	51
613	Rear screen wiper switch	56	760	Cruise control vacuum pump	59
615	Alarm switch (volumetric protection)	67	761	Fuel transfer pump	-
620	Inertia switch	51	763	Diesel injection pump	51
			765	Radio set	65
650	Fuel gauge	52			
			770	Throttle spindle potentiometer	51
660	Map reading lamp	55	771	Accelerator pedal potentiometer	58
			772	Co mixture potentiometer	51
670	Brake pressure switch (suspension)	58	773	Load lever potentiometer	51
671	Engine oil pressure switch	51	775	Pressostat	64
672	Hydraulic pressure switch	52	778	Electric cooling fan test plug	64
673	Air filter pressure switch	51	779	T.D.C. sensor plug	51
674	Turbo overcharging pressure switch	51	780	Supply socket (accessories)	55
680	Ignition module	51	781	ABS diagnostic socket	67
681	Blower fan control module	64	782	Air conditioning diagnostic socket	64
682	Eurobag steering wheel module	55	783	Injection diagnostic socket	51
685	Clock	55	784	Suspension diagnostic socket	58
690	Driver's seat pull/push motor	63	785	Anti-pollution system diag. socket	51
691	Passenger's seat pull/push motor	63	786	Headlamp : L.H. main and dipped beams	55
692	Driver's seat backrest motor	63	787	Headlamps : R.H. main and dipped beams	55
693	Passenger's seat backrest motor	63	790	Air blower (single or L.H.)	64
694	Windscreen wiper motor	56	791	R.H. air blower	64
695	Rear screen wiper motor	56			
696	L.H. electric front window motor	67	795	Antitheft alarm relay	67
697	R.H. electric front window motor	67	800	Anti-jolt relay	58
698	L.H. electric rear window motor	67	801	Automatic gearbox relay	59
699	R.H. electric rear window motor	67	802	Injection E.C.U. relay	51
700	Air mixing motor	64	804	Air conditioning relay	64
701	Driver's seat raising motor	63	805	Refrigeration compressor cut-off relay	64
702	Sun roof motor	67	806	Front foglamps relay	54
703	Driver's door lock motor	67	807	Injection relay	51
704	Passenger's door lock motor	67	808	Headlamp washer relay	56
705	L.H. rear door lock motor	67	809	Electric front window relay	67
706	R.H. rear door lock motor	67	810	Electric rear window relay	67
707	Fuel filler flap lock motor	67	811	Driver's seat operating relay	63
708	Tailgate lock motor	67	812	Passenger's seat operating relay	63
709	Centre armrest motor	63	813	Cooling fan (fast/slow speed) relay	64
710	Air distribution motor	64	814	Electric cooling fan (fast speed) relay	64
711	Air recycling motor (single or L.H.)	64	815	Cooling fan relay (speed inverter)	64
712	Idling speed stepper motor	51	816	Fuel pump relay	51
713	R.H. air recycling motor	64	817	Front heated seat relay	63
714	ABS hydraulic pump motor	57	818	Oxygen sensor relay	51
715	L.H. headlamp adjusting device motor	54	819	Rear foglamps relay	54
716	R.H. headlamp adjusting device motor	54	820	Heated rear screen relay	56
717	Differential locking motor	64	821	Air conditioning additional relay	64
720	Single or L.H. electric cooling fan	64	822	Injection refrigeration compressor cut-off relay	51-64
721	R.H. electric cooling fan	64			
724	Anti-pinch electric window reduction motor	67			



Ref.	Description	Funct.	Ref.	Description	Funct.
823	Sun roof relay	67	914	Water-in-fuel filter sensor	51
824	Heated rear seats and/or sun roof relay	63	915	Water temperat. switch sensor	52
825	Dipped beams relay	54	916	Air con.water temperat. sensor	64
826	Choke heating relay	51	917	Catal. converter temp. sensor	51
827	Dipped beams (day time) or Dim-dip relay	54	918	Engine oil temperature sensor	52
828	Cooling fan relay (against fuel vapour lock)	64	919	Engine water level sensor	52
829	Side and tail lamps (day time) relay	54	920	Oil temperat. switch sensor (on automatic gearbox)	51
830	Recycling relay	51	921	Engine water temperat. sensor (emission control)	51
831	Cruise control relay	59	922	Fuel temperature sensor	52
832	Sun roof sliding relay	67	923	Engine water temperature switch sensor (emission control)	51
833	Sun roof tilt position relay	67	940	Advance timing system	51
834	Headlamps relay	54			
836	Ignition relay	51			
837	Lighting timer relay	55			
838	Automatic gearbox idling speed relay	51-59	960	Anti-jolt timer	58
839	Cooling fan relay (air conditioning)	51-64	961	Lighting timer	55
840	Fuel injection correction relay	51	962	Windscreen wiper timer	56
841	Electric window re-energising relay	67	963	Rear screen wiper timer	56
842	Air blower motor relay	64	964	Cooling fan timer unit	64
843	Air horn compressor relay	57	969	Engine water pre-warning thermal switch	52
844	ABS main relay	57	970	Engine water warn.therm.switch	51-52
845	ABS hydraulic pump relay	57	971	Radiator coolant thermal switch	64
846	Fuel transfer pump relay	-	972	Engine coolant thermal switch (against fuel vapour lock)	64
848	Engine running information relay	TT			
			973	Coolant thermal switch (air con.)	64
850	L.H. rear seat base resistance	63	974	Coolant thermal switch (emission control)	51
851	R.H. rear seat base resistance	63	975	Engine oil thermal switch	51
852	L.H. rear seat backrest resistance	63			
853	R.H. rear seat backrest resistance	63	990	Heated rear screen	56
854	L.H. front seat resistance	63	991	Burglar alarm warning lamp	67
855	R.H. front seat resistance	63	992	Airbag warning lamp	55
856	Choke heater resistance	51			
857	Carburettor base heating resistance	51			
858	Dipped beams resistance	54			
859	Air blower speed resistance	64			
860	Coding resistance	51			
861	Intake air heating resistance	51			
862	Injector additional resistance	51			
863	Atmospheric pressure switch resistance	51			
864	Electric cooling fan resistance	64			
865	Oil fumes heating resistance	51			
866	Emission control resistance	51			
874	Sun roof supply relay	67			
875	L.H. rear view mirror	56			
876	R.H. rear view mirror	56			
880	Lighting rheostat	52-65			
884	Driver's airbag	55			
888	Siren	67			
899	Front oxygen sensor	51			
900	Rear or single oxygen sensor	51			
901	Screen washer water level sensor	52-56			
902	Engine oil level sensor	52			
903	Injection air pressure sensor	51			
904	Engine oil pressure sensor	51-52			
905	Turbo air pressure sensor	51			
906	Exterior air temperature sensor	52			
907	Injection air temperature sensor	51			
908	Air conditioning duct temperature sensor	64			
909	Engine water temperature sensor (injection)	51			
910	Engine water temperature sensor	52-64			
911	Engine water temp. sensor (dial)	52			
912	Evaporator temperature sensor	64			
913	Veh. interior air temp. sensor	64			